

# AmTryke, LLC


## AM-9 chain tensioner instructions

1-888-AmTryke

### Chain Tension Instructions

- 1) Remove crank arm securing bolt.
- 2) Remove crank arm assembly (you will need a crank puller for this.)
- 3) Remove Chain Guard
- 4) Install Chain
- 5) Loosen Collar around steering. See Pic 1
- 6) Loosen all metal chain guard screws. See Pic 2
- 7) Loosen chain tensioner. See Pic 3
- 8) Pull upwards on steering while holding down on front fork assembly.
- 9) Tighten steering collar. See Pic 1
- 10) Tighten all Metal chain guard screws. See Pic 2
- 11) Adjust chain tensioner correctly. See Pic 3
- 12) Re-install parts from step 3 to step 1 above.

Pic 1

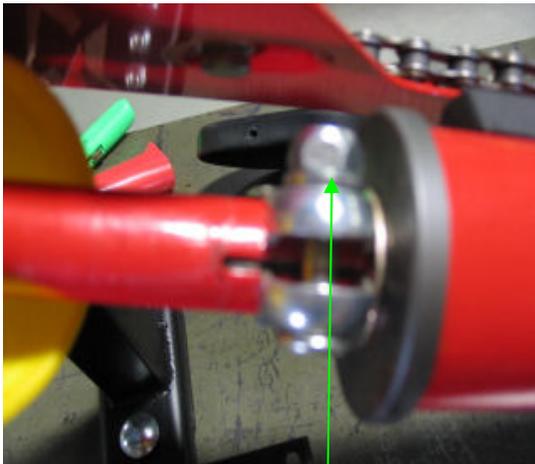

Steering Collar

Pic 2



Metal chain guard screws

Pic 3



Chain Tensioner